


























NEW 2007!



**Universal Chip
Product Instruction Booklet**

BIOPRO Technology leads the way in electropollution intervention advances with the BIOPRO UNIVERSAL CHIP. The most powerful first-line defense against electropollution, this amazing chip is indeed universal: this technology can effectively be used on any appliance or device emitting electromagnetic frequencies (EMF) or electromagnetic radiation (EMR). Cell phones, home phones, automobiles, microwaves, computers, game consoles, etc. If it plugs or plays or runs or operates on batteries or current, **play it safe with BIOPRO UNIVERSAL CHIPS.**

Some devices may need only one chip, others may need two, three or more depending on the nature of the device. Here are some guidelines:

How many Universal Chips do I need for...	Where do I put the Universal Chips?
Cordless Phone Two Chips 	1 chip on base station, 1 chip on phone, both close to antenna 
Desktop Computer Two Chips 	1 chip on computer tower (top, front or side), 1 chip on display monitor (centered on top or bottom) 
Laptop Computer One Chip 	1 chip, top-centered on the outside of the display panel 
Game Station Two Chips 	1 chip centered on top of console, 1 chip on bottom of each control unit 
Automobile Two Chips 	1 chip on driver side dashboard, 1 chip on passenger side dashboard 
Television Two Chips 	1 chip centered above TV screen, 1 chip centered below TV screen 
Vacuum Cleaner Two Chips 	1 chip on handle, 1 chip on housing 
Refrigerator Two Chips 	1 chip each on top & bottom center of refrigerator front 
Toaster One Chip 	1 chip on front (centered) 
Microwave Two Chips 	1 chip each on top left and right front corners, close to door seals 
Alarm Clock One Chip 	1 chip on front-face or top of alarm clock 
Hair Dryer One Chip 	1 chip on any flat surface of dryer 
Coffee Maker One Chip 	1 chip close to on/off switch 

010207